





# **TP-BC48-300**

## **AC to DC48V UNINTERRUPTED POWER SUPPLY User Manual**

### **Specifications and Features:**

- 210W Total Max.
  - DC power output 4A Max. @48V
  - Charge current 3.62A Max. @58V
- Net weight, only 4.63 lbs/2.1kg
- Dimensions 252\*54\*190 m/m (W\*H\*D)
- Over Voltage protection
- Over Current protection
- Quiet Internal Cooling Fan
- Input Voltage: Selectable AC input voltage
  - 120 Vac at 50/60Hz (5.1A@F.L.)
  - 240 Vac at 50/60Hz (2.6A@F.L.)
- Super Regulation:
  - Works with AC input from 90 to 265Vac
- Back-up Power Supply System
- Compatible with Solar and Wind Charge Controllers

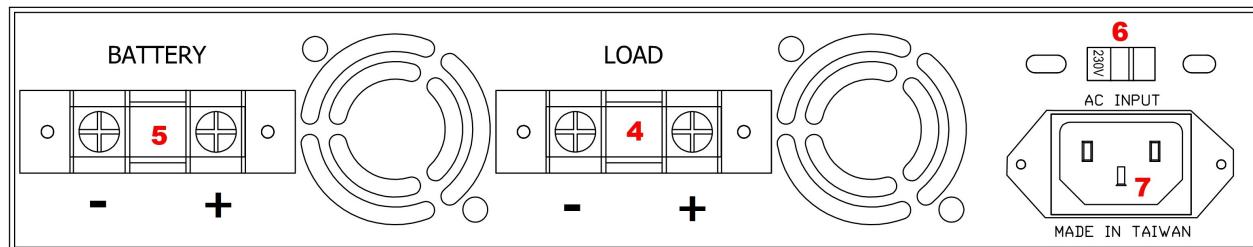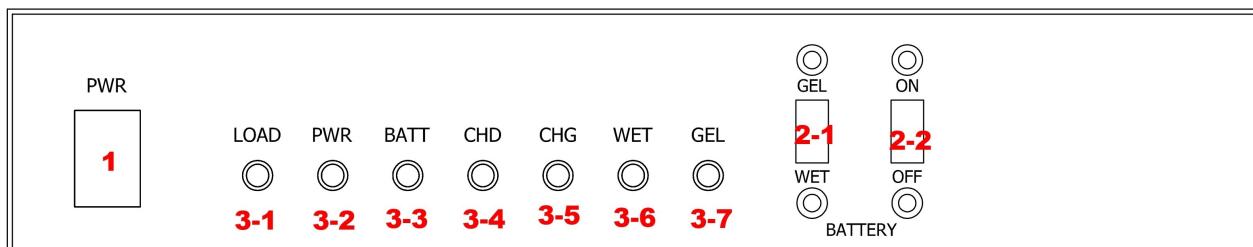

#### PANEL DESCRIPTION


Item	Name	Description
1	Power Switch	Control AC power On or Off,
2-1	Battery Type Selector	<b>WET</b> Flooded battery <b>GEL</b> Gel battery
2-2	Battery On/Off Switch	Control Battery On or Off
3-1	<b>LOAD</b> Load Indicator	Light GREEN when the LOAD is working
3-2	<b>PWR</b> AC Power Indicator	Light YELLOW when the model with AC input and power switch is on
3-3	<b>BATT</b> Battery Polarity Indicator	Light GREEN when BATTERY polarity connection is correct, light RED when connection is incorrect
3-4	<b>CHD</b> Full Charged Indicator	Light GREEN when battery is full charged.
3-5	<b>CHG</b> Charging Indicator	Light YELLOW when battery is in charging mode.
3-6	<b>WET</b> Battery Type Indicator	Green LED light on when battery type selector is set on <b>WET</b> position
3-7	<b>GEL</b> Battery Type Indicator	Yellow LED light on when battery type selector is set on <b>GEL</b> position
4	<b>LOAD</b> Output Terminal Block	For connection to load
5	<b>BATTERY</b> Output Terminal Block	For connection to battery
6	AC Voltage Selector	Select AC input voltage to be <b>115V</b> (100V~120VAC) or <b>230V</b> (220~240VAC) Factory Default 230V
7	AC Socket	For separate AC power cord connection

## ● INSTALLATION:

Before plugging in the model to an AC outlet, please make sure that the proper input voltage is selected on the rear of the unit. Select **115V** for 100/110/120 AC operation or **230V** for 200/220/240 AC operation. The factory default setting is 230V.

Then, connect your device to the **LOAD** terminal and connect a lead acid battery to the **BATTERY** terminal, make sure the polarity of battery is correctly connected, select **WET** for wet battery, **GEL** for GEL or AGM battery.

You may connect a solar panel or wind turbine to the **BATTERY** terminal at the same time by connecting a solar panel or wind turbine controller to the battery terminals, please make sure it is as the same polarity as battery, otherwise, it will damage the battery and the control circuit.

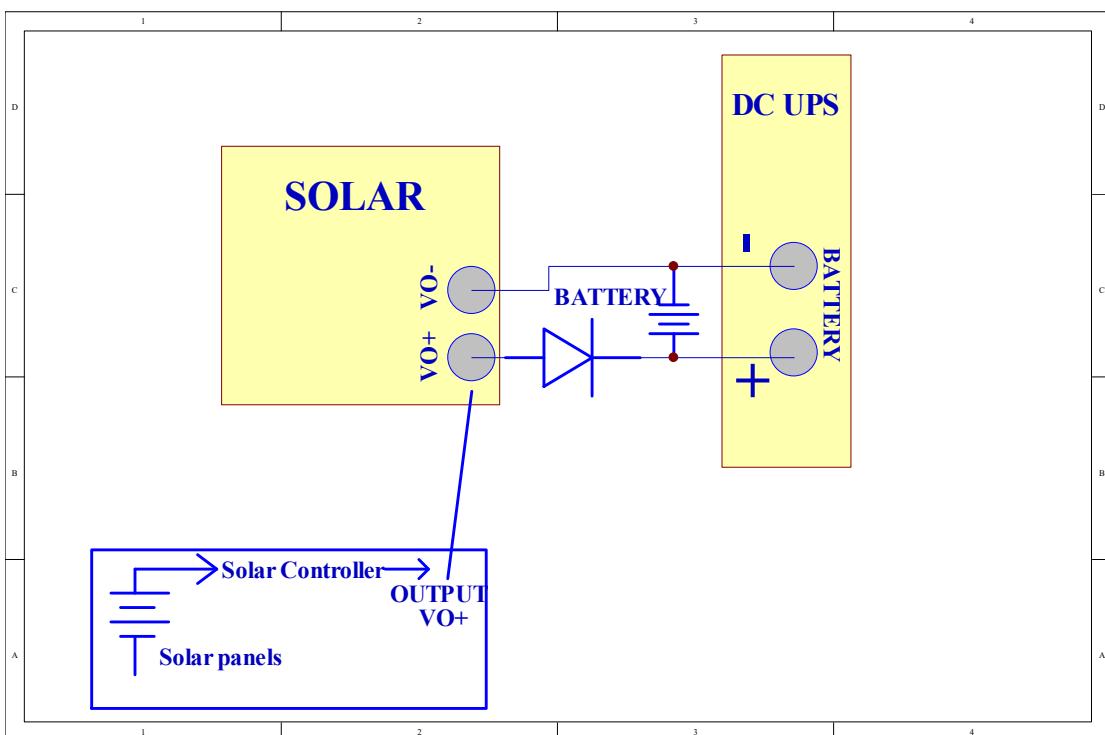

Now, plug in the power cord to AC outlet, turn the **PWR** switch to the “ON” position. Turn on your device now.

## ● OPERATION:

The PS works as a DC UPS (Uninterruptible Power Supply) or as a backup power supply system. When AC power is applied normally, the model offers a regulated 48V DC output at **LOAD** terminal for devices and a charging current output on **BATTERY** terminal for charging a lead acid battery at the same time. Once AC fails, the battery will replace the AC to power the model immediately without interruption. The **LOAD** terminal will remain at 48VDC output for a while till the battery voltage reduces to lower than 40V, the duration time depends on the volume of the battery and the size of the load. When AC returns, AC takes over the battery to power the load automatically, and start to charge the battery.

If you connect a solar panel or wind turbine to the **BATTERY** terminal at the same time, if AC failed, when the battery voltage lower than 40V, the **LOAD** output will turn off, but if the output voltage of the solar panel or wind turbine is higher than the battery voltage, the battery will be charged by the solar panel or wind turbine, when the battery voltage is back to 51V, the **LOAD** output will recover automatically.

The maximum load of the PS is around 210W, which means 4A maximum DC output on **LOAD** and 3.62A maximum charge current on **BATTERY**. If the load draws 4A output, then the charge current will be limited to around 0.3A, if there is no load, then charge current may be up to 3.62A maximum.

The output voltage on **LOAD** terminal is regulated at  $48V \pm 0.5V$ , with over voltage protection, over current protection and short circuit protection.

The charge voltage for WET battery is 58V, floating voltage is 53V.

The charge voltage for GEL battery is 56.8V, floating voltage is 54V

When the charger is in charging mode and charge current is more than 1.4A, the **CHG** indicator light will be YELLOW, when charge current is lower than 1.0A, the charger turns to maintenance mode, the **CHG** light is off and **CHD** light is GREEN.

All LED indicators will turn off when AC fails except **BATT** and battery type indicator (**WET** or **GEL**).

If no battery is connected on **BATTERY** terminal, then there will be no output on the terminal.

The cooling fan on the model will auto turn on when the inner temperature of unit over +50C, and will turned off when the temperature less than +45C.

● **NOTICE:**


1. **DON'T CONNECT THE PS TO 12V OR 24V BATTERY.** The PS was designed for 48V system. Connection to the wrong battery will damage the PS.
2. **THE AC SWITCH MUST BE TURNED OFF AT ANY TIME WHEN THE BATTERY IS CHANGED.**
3. Select the correct battery type on the panel, wrong selection will damage the battery or it will not fully charge the battery. Do not change the battery type selector when charging.
4. The model has a 6 amp AC input fuse inside of the unit. To replace the fuse you should remove the old fuse by opening the case and replace it with a new 6 amp fuse.

5. The cables for battery connection or device to the PS should be 18AWG min.

Please keeping the connect points clean to avoid spark or electrical leakage.

6. When connecting a solar panel or wind turbine controller to the PS, please make sure of the correct polarity.

7. Product label

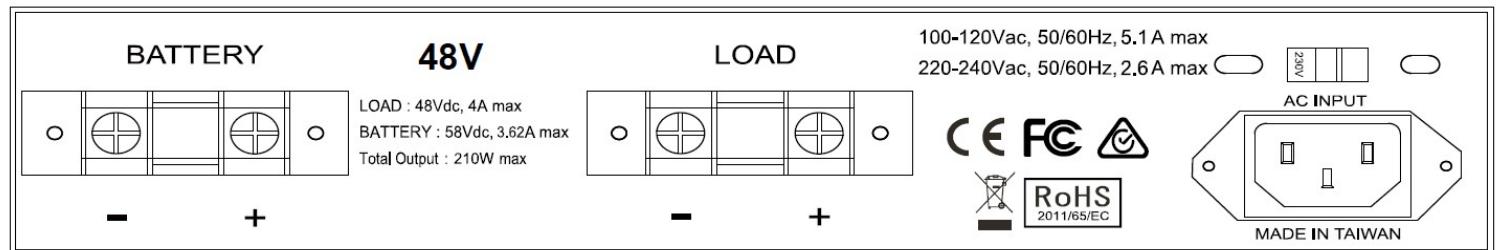

## ● PROTECTION DESCRIPTION:

**Battery Polarity Reverse Protection:** when the battery polarity is reversed, the **BATT** indicator light will display RED and the **BATTERY** and **LOAD** terminals will terminate output. Battery reverse will not damage the model if the AC power is off. The AC switch must be turned off at any time when the battery is changed. If AC is on and the battery is connected, the PS polarity reverse protection is disabled, and if the polarity is reversed again, the fuse of the PS will be burnt, sometimes causing a spark.

**Battery Low Voltage protection:** When the AC is OFF or has failed, if the battery voltage is lower than  $40V \pm 0.2V$ , the model will turn off the battery and the output on **LOAD**. When AC returns or the battery voltage returns to  $51V \pm 0.2V$ , then the output on **LOAD** will recover automatically.

**Load Over Current Protection:** the model will automatically shut down if the load is over 4A. when the load is reduced, the PS will auto recover.

**Load Over Voltage Protection:** when the **LOAD** output is over  $59V \sim 63V$ , the PS will turn off.

**Load Short Circuit Protection:** output terminal short circuit will not damage the PS, it will be simply stop the output. When the short circuit status is removed, the **LOAD** will recover immediately.